

Mifare™ /DESFire™ Reader User's Manual



(For DF7XX Series)

REV.G
May 26, 2017

Table of Contents

1.	Introduction.....	4
1.1	General.....	4
1.2	Product Description.....	5
1.2.1	Reader Description.....	5
1.2.2	Reader Appearance.....	5
1.3	Mifare™ Application Directory (MAD) Support.....	6
1.4	User-Data Format.....	7
2.	Specification.....	8
2.1	Hardware Specification.....	8
2.2	Order Information.....	8
3.	Preparation.....	9
3.1	Wires Assignment.....	9
3.2	WebISP - Firmware Update Utility.....	11
3.3	Setting Reader.....	12
	Mifare Settings	13
	DESFire Settings	14
	Reader Settings	15
	Input Settings - Input Mode and Key Pad Settings	16
	LED / Buzzer Settings	19
	Wiegand Settings	22
	ABA-TK2 Settings	23
	RS232/485 Output Settings	24
	Configured Card	26
3.4	Make a Configured Card.....	27
4.	Data Output.....	30
4.1	Reader Test.....	30
4.2	Test Read Card After Updating.....	31
4.3	Test Key Pad After Updating.....	32
4.3.1	Simply Output “1234” – RS232 Interface.....	32
4.3.2	Simply Output “1234” – ABA-TK2 Interface.....	33
4.3.2	Simply Output “1234” –Wiegand Interface.....	34
	Appendix.....	35
	ANNEX A. Wiegand Interface	35

ANNEX B. ABA-TK2 Interface	37
ANNEX C. RS232 Interface	39
ANNEX D. External LED/Buzzer Control	40
ANNEX E. History	41

1. Introduction

1.1 General

DF7XX series are available with metal keypad and without metal keypad options for customer end applications. The communication interfaces between the reader and tags are with RS232, ABA TK2, Wiegand or RS485 to match the integration requirement.

Features:

1. Supports MAD1/MAD2/MAD3 standard, and supports customer MAD-AID setting.
2. Supports Non-MAD format with user-defined sector number.
3. Supports used card with data offset and length.
4. Supports multi sectors.
5. Reads Mifare™ Classic 1K/4K, Mifare™ Pro, or DESFire™ 2K/4K/8K card.
6. Sets each reader with reader ID for multi-link application.
7. Output interface: Wiegand (Default), ABA-TK2 and RS232/RS485.
8. Wiegand output selectable from 1 bit to 128 bits.
9. RS232 output packet can be set with header, reader ID and trailer.
10. Serves as a versatile configurable reader bundled with a utility developed by Promag™ engineering teams which is easy to set up for buzz or LED color indication.
11. Has the IP 66 certificate to secure the critical installation environment. Also passed the R&TTE, FCC approval.
12. Protected by mutual three passes authentication, DES & 3 DES MACing/Encipherment.
13. Classic housing and various models offer customers wide coverage to select for their application demand. The inside buzzer and LED are able to be configured by the bundled utility.

Application:

1. Access Control.
2. Time Attendance.
3. Guest Registration System.
4. Academic Services.
5. Info Services.
6. Identity authentication.

1.2 Product Description

1.2.1 Reader Description

DF7XX series are available for user's end configuration by applying Mifare sector and Mifare DESFire technology. They can be configured to read Mifare or Mifare DESFire card with MAD1/MAD2 or MAD3 standard in a Mifare application open system, or can be configured to read the user-defined sector data (Non-MAD) in a user defined closed system.

1.2.2 Reader Appearance

DF700/DF710 series




DF750/DF760 series




1.3 Mifare™ Application Directory (MAD) Support

DF7XX supports the MAD format card, the MAD (Mifare application directory) standard proposes the introduction of common data structures for card application directory entries. DF7XX should take advantage of this feature using those sector pointers instead of physical sector number.

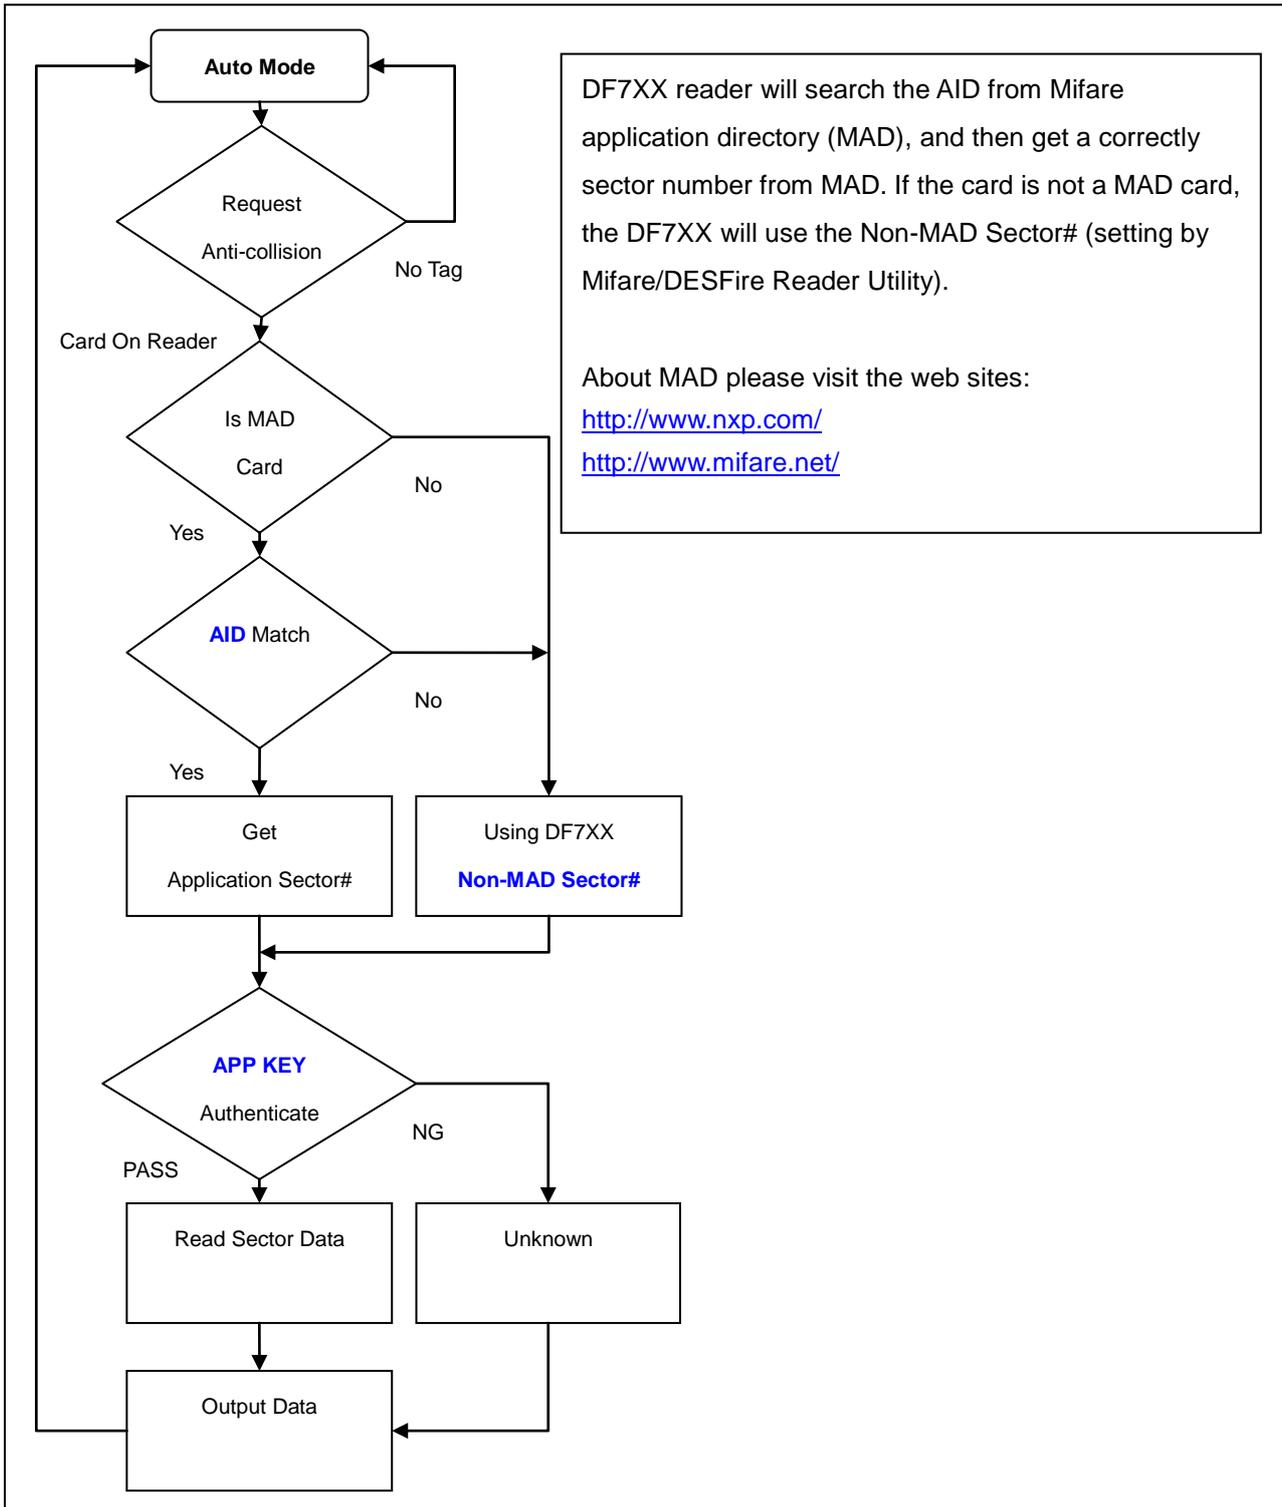

1.4 User-Data Format

DF7XX will send out the data following the format as below, the user data length defined by the data-info. At Wiegand output format, the data output length is fixed (defined by number of bits), so the user data would be cut if longer than number of bits, or the user data would be appended with zero "0" if shorter than number of bits.

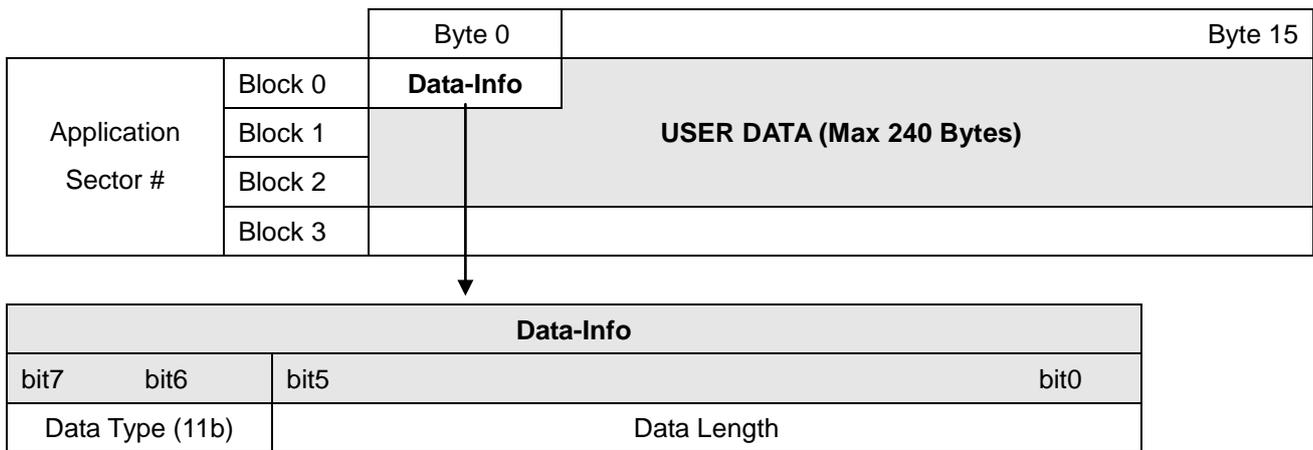

Data type is fixed with 11b which means "any other data" type of "Card Holder information" as MAD standard. And data length is including the data with ending zero "0", so the number of data byte sent by DF7XX is equal to data length with one less for RS232 output.

Example: If data length is 16, DF7XX only sends out 15 bytes for RS232 output.

2. Specification

2.1 Hardware Specification

DF7XX reader	
Major Feature	Mifare™ /DESFire™ Application Directory Reader Access Control & Security
Card Type	ISO14443A, Mifare™ Classic 1K/4K for MAD1/MAD2, Mifare™ Pro, Mifare DESFire™ 2k/4K/8K
RF Frequency	13.56MHz
DC Power	DC 7.5~24V /125mA@12V
Interface	Wiegand 1~128 bits (Standard / Reverse) RS232 2400~57600 (baud rate) ABA-TK2 40IPS

2.2 Order Information

Part Number	Include	Description
DF700-00	DF700-00	DF700 Mifare™ /DESFire™ Configurable Reader
MF700KIT-10	Reader-Kit WAS-T0029 DISK5238 Power Adaptor	Reader-Kit Reader Configure Cable Install CD (Document, Driver, Software) DC Power Adaptor 9VDC for Reader-Kit
MFA01	MFA01	Mifare™ Classic 1K Card
MFA04	MFA04	Mifare™ Classic 4K Card


3. Preparation

3.1 Wires Assignment

Color	Symbol	I/O	Description
Red	VCC	IN	Power Input : DC 7.5V~24V
Black	GND	IN	Power Ground
White	DATA 1	OUT	Wiegand Data 1 Signal / ABA TK2 Clock (Strobe)
Green	DATA 0	OUT	Wiegand Data 0 Signal / ABA TK2 Data
Yellow	TXD	OUT	RS232 TXD (To Host RXD) / RS485+ (for DF710/DF760)
Blue	RXD	IN	RS232 RXD (To Host TXD) / RS485- (for DF710/DF760)
Orange	CP	OUT	ABA TK2 Card Present
Brown	LED/BUZEER	IN	External LED/BUZZER Control

To configure DF7XX, you need to connect the reader to the reader-kit first below:

DF700/DF750(K)


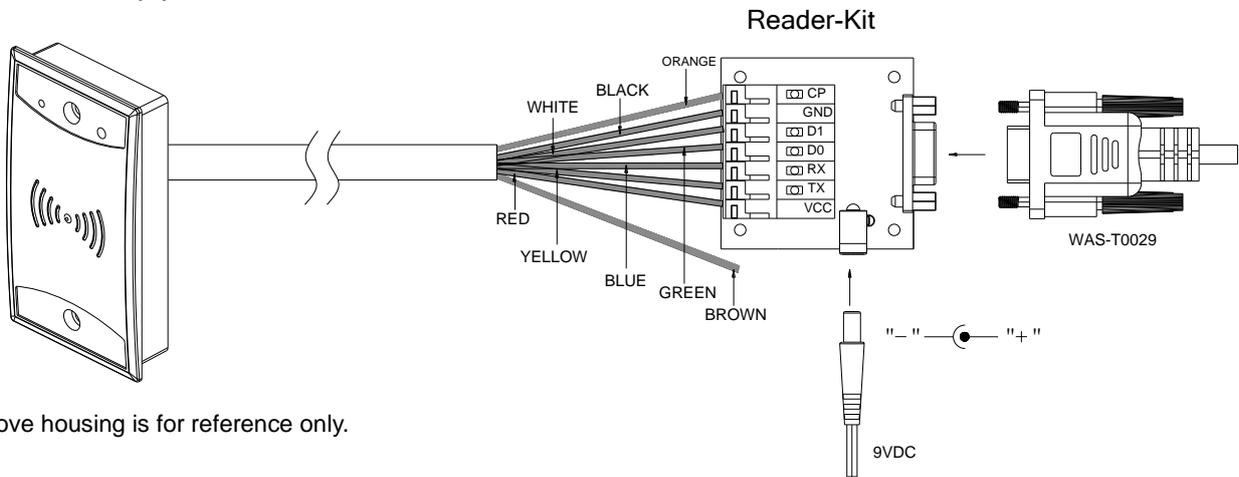


Above housing is for reference only.

DF710/DF760(K)

The following is the example of using USB485A-00 with DF710/DF760(K).



Connect the reader's yellow wire (T+) and blue wire (T-) to RS485 converter. Connect RS485 converter to PC.
(Using Promag™ USB485A-00 is recommended.)

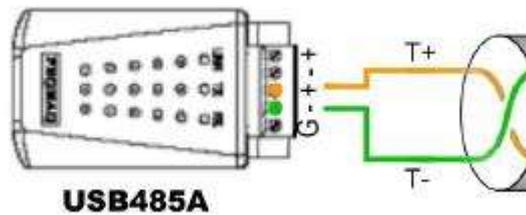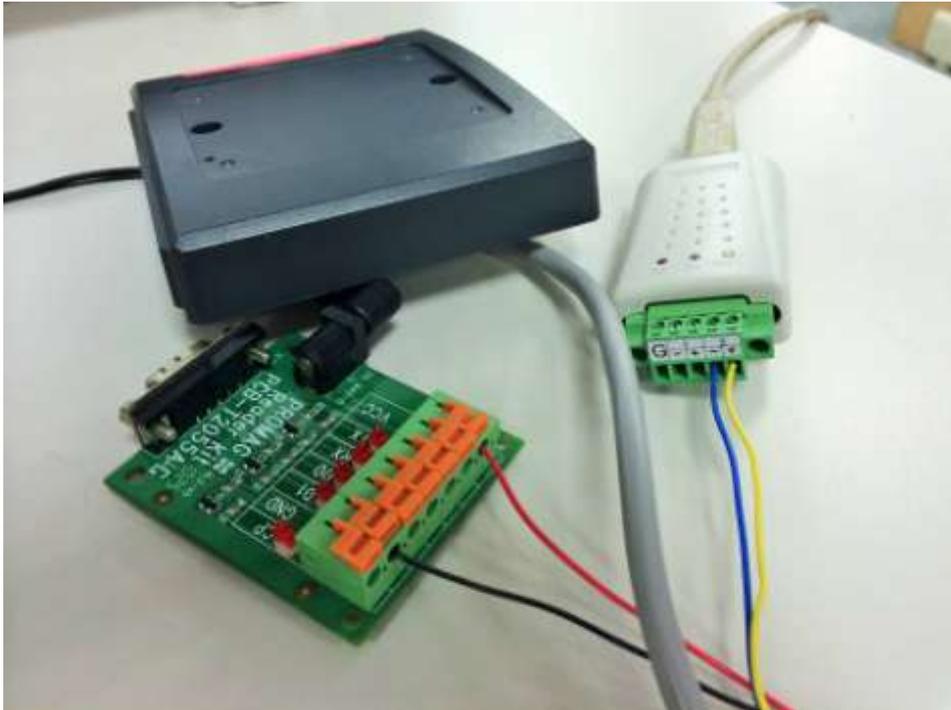

Note: Reader-kit and USB485A-00 are connection tool kit. They are optional items for purchasing.

3.2 WebISP - Firmware Update Utility


DF7XX also supports the ISP (In-System Program) function to upgrade the reader's firmware. Install WebISP (included in CD-ROM) in your Windows System first and follow the steps below. (You need to connect the reader to PC and power on the reader.)
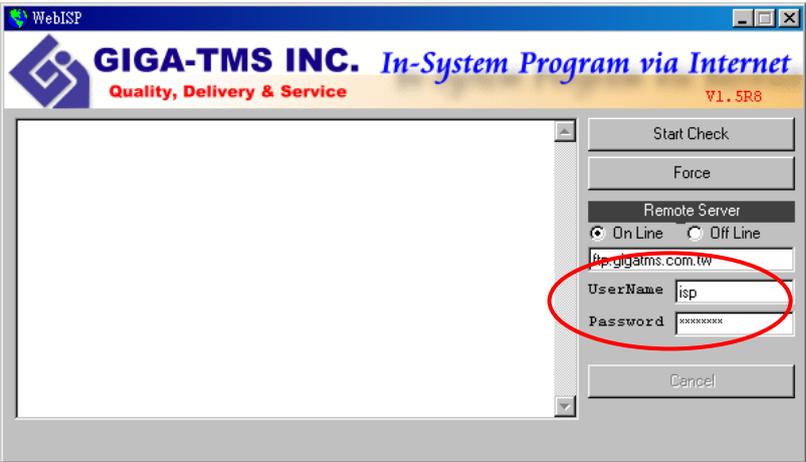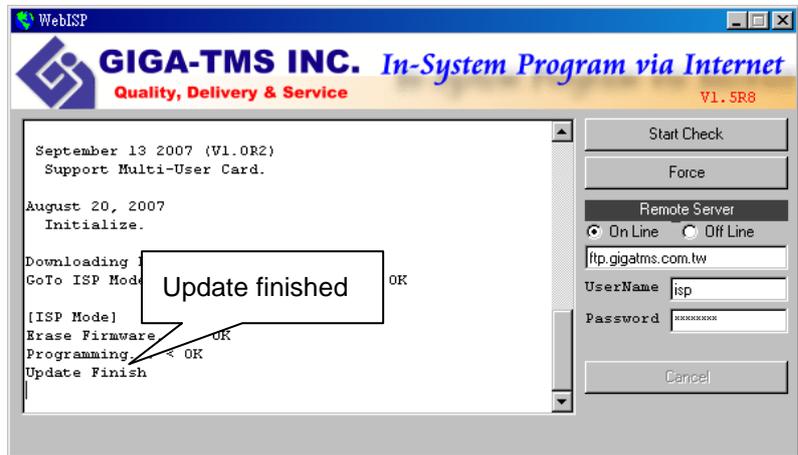
<p>Step 1: Input your account (UserName and Password)</p> <p>Note: Contact us to get your account when needed.</p> <p>Step 2: Click [Start Check] to automatically check the firmware version from our FTP server.</p>	 <p>Note:</p> <ol style="list-style-type: none"> 1. WebISP will auto scan all COM ports to search the reader or programmer. 2. WebISP will show the [Update Information] and list the update history. 3. If the firmware version is out of date, WebISP will prompt you to update the firmware. Click [Update] to begin updating the firmware.
<p>Step 3: Wait for the updating to finish. And repeat step 2 to update other readers or programmers.</p>	

3.3 Setting Reader

Install Mifare/DesFire Reader Utility software (included in CD-ROM) in your PC, and connect the reader to PC. Please check the connection of PC-to-reader is correctly.

1. Connection

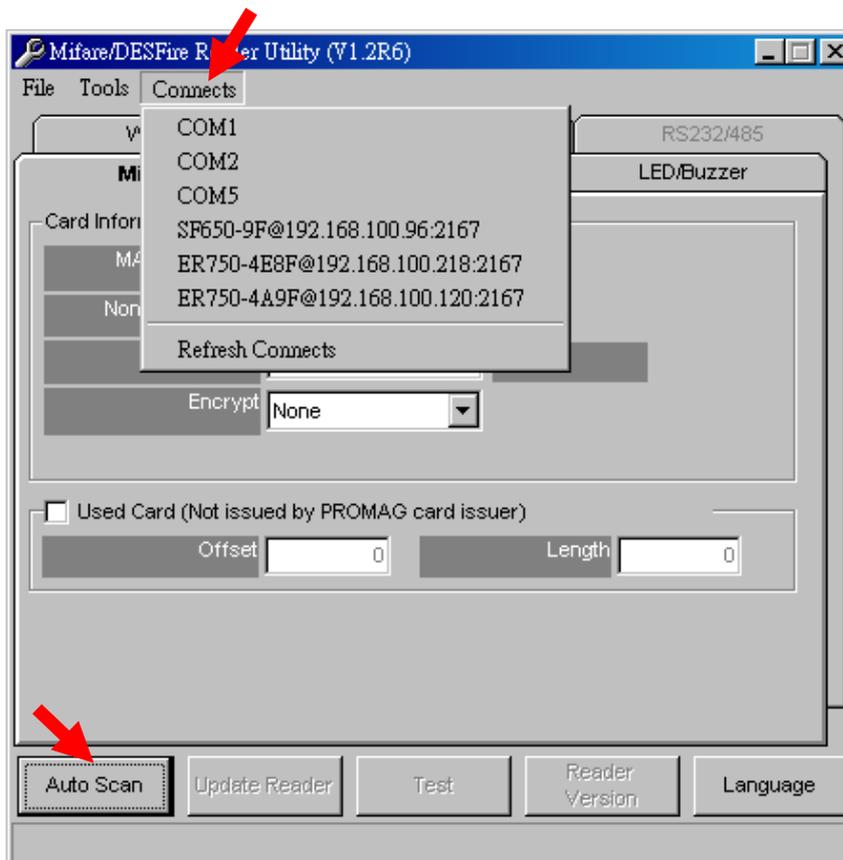

Method 1


Click [Auto Scan] to search all COM ports and to find the available device.

Method 2

Click [Connects] and choose the COM port to detect available device.

2. Instruction

➤ Mifare Settings

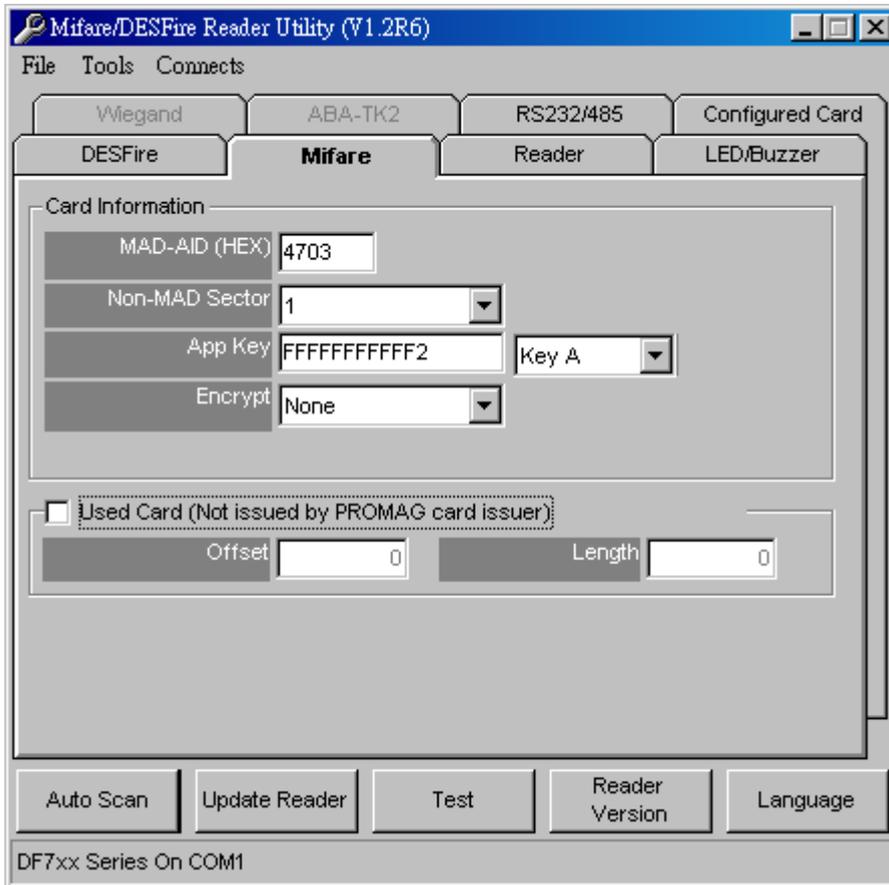

MAD-AID (default=4703)

MAD Application Identifier number is authorized and assigned by Mifare.net™ upon the customer's request for registered Application Identifier in a Mifare application open system (AID:0000h~FFFFh). Or it is also possible for the user to define the AID himself for the application in user defined closed system without registering into MAD group. According to the AID, DF7XX can find and read the corresponding sector on the MAD card.

App Key (KEY_A) (default=FFFFFFFFFFFF)

App Key must be the same as the KEY_A of the card issued. This means DF7XX only can read the sector data on the card with the same KEY_A.

Encrypt (default=None)

Fraud prevention, Select Encrypt Mode (None, Encrypt 1, Encrypt 2, Encrypt 3, Encrypt 4, Encrypt 5) to protect your card data. (Remark: Encrypt mode must work together with the same encrypt mode of "Mifare Card Issuer" software.)


Used Card (Not issued by PROMAG Card Issuer)

You have to indicate the data position in the card, when the card is not issued by "Mifare Card Issuer" software. And you must set the "Offset" (Max 255, and base from zero) from the beginning of sector and set your data "Length" (Max 240).

Example: If your card data is in the grey grid of sector, you have to set the "Offset" = 17, and set the "Length"= 20.

	AID Sector (or Non-MAD Sector)															
Block 0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Block 1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
Block 2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47

➤ DESFire Settings

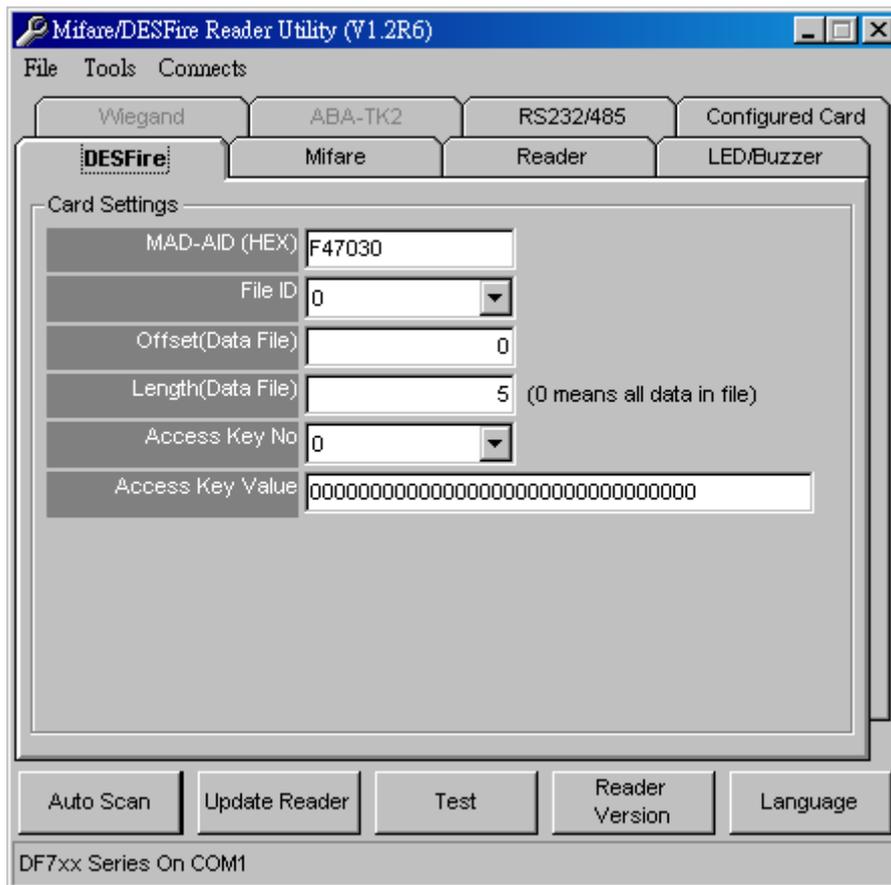

MAD-AID (default=F47030)

MAD Application Identifier number is authorized and assigned by Mifare.net™ upon the customer's request for registered Application Identifier in a Mifare application open system (AID:000000h~FFFFFh). Or it is also possible for the user to define the AID himself for the

application in user defined closed system without registering into MAD group. According to the AID, DF7XX can find and read the corresponding application on the card.

File ID (default=0)

File ID is 0~15. There are three file types. Data file, Value file and Record file. DF7XX will auto detect the type and output the data.

Offset/Length (default=0 / 5)


The Data file will depend on the value to output data. The Value file will be sent the value out. The Record file will be sent the latest record data.

Access Key No/Value (default=0 / 00000000000000000000000000000000)

Key must be the same as the Read or Read/Write KEY of the card issued. This means DF7XX only can read the data on the card with the same key.

⇒ DF App Admin Key (KeyNo=0)

➤ Reader Settings

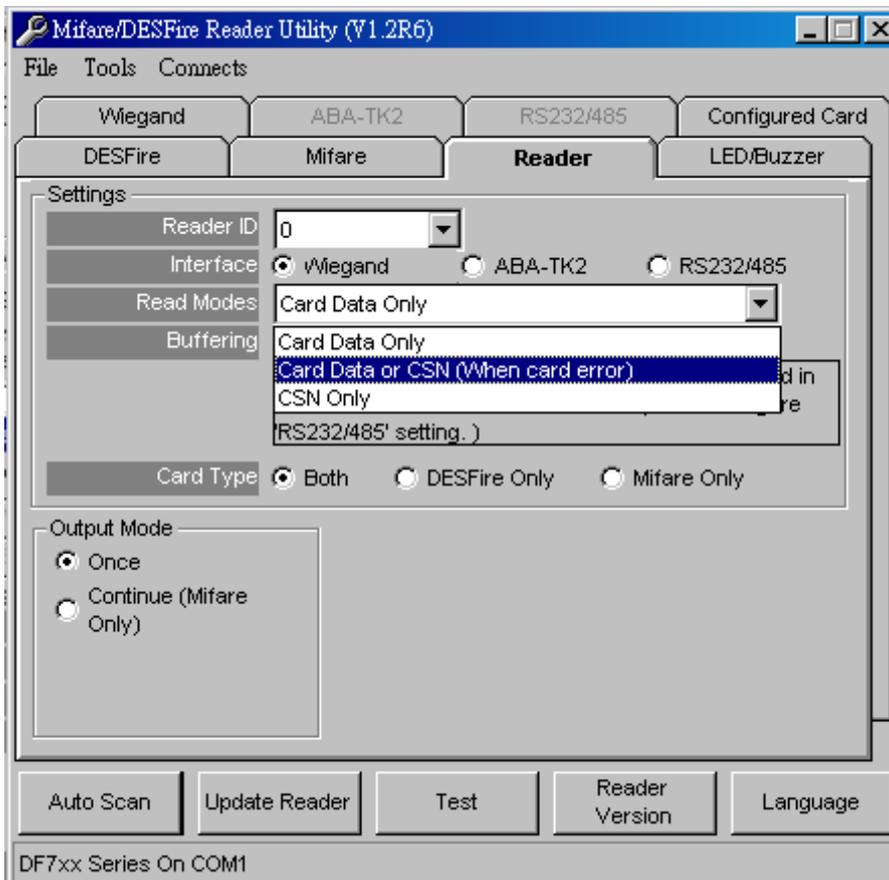

Reader ID (default=0)

DF7XX ID for multi link application. (ID: 0~63)

Interface (default=Wiegand)

DF7XX can be set as Wiegand, RS232 or ABA-TK2 output.

Read Modes (default=Card Data Only)


- **Card Data Only** Read card sector data only. If any error occurs (ex: App. key incorrect.), the reader will represent "Card Invalid" status.
- **Card Data or CSN** Read card sector data. When any error occurs (ex: App. key incorrect.), the reader will output "CSN".
- **CSN Only** Read card CSN (card ID) only.

Output Modes (default=Once)

- **Once** Read card sector data only. If any error occurs (ex: App. key incorrect.), the reader will represent "Card Invalid" status.
- **Continue** Keeping sending data (or CSN) to host till card remove. Only for Mifare card.

➤ Input Settings - Input Mode and Key Pad Settings

Input Settings allows you to choose using (1) Card, (2) PIN or (3) Card then PIN to present your ID.

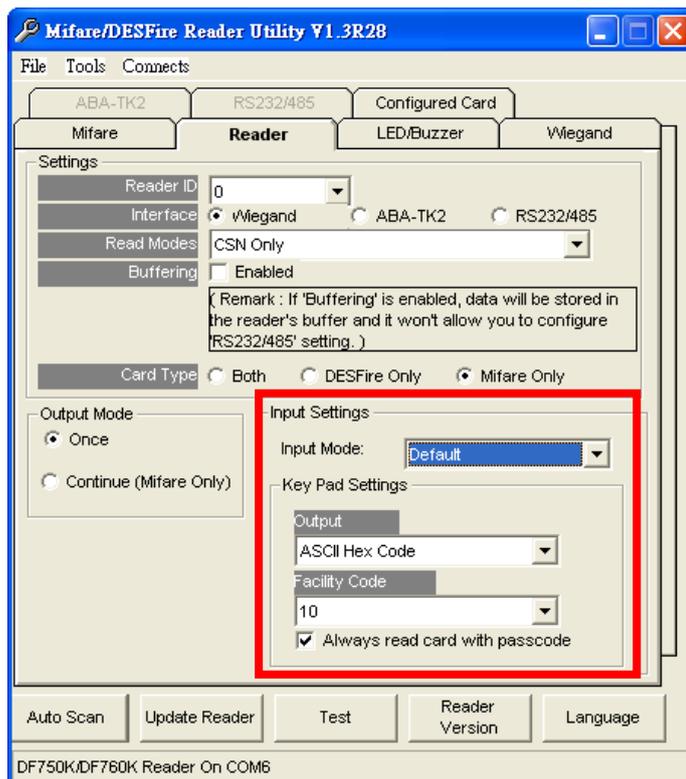

Input Mode

Select how user will present his/her ID.

- **Default** User can use Card, Enter PIN number or both to present his/her ID.
- **PIN Only** User can only Enter PIN number to present his/her ID.
- **Card with passcode** User can only use Card which must register passcode to present his/her ID. If the presented card that doesn't contain the passcode, then the reader will refuse to access it and will sound an error beep.
- **Card without passcode** User can only use Card which must not register passcode to present his/her ID. If the presented card that contain the passcode, and then the reader will refuse to access it and will sound an error beep.

Key Pad Settings

- **Output (default=Wiegand 8Bits)**

Wiegand 4, 6, 8 Send Wiegand signal pre key pressing.

ASCII Hex Code Send ASCII code pre key pressing.

Buffering (Decimal) Press 0~65535 numbers and press "#" to send decimal numbers. ("*" to cancel.)

Buffering (BCD) Press 0~ 99999999 numbers and press "#" to send BCD numbers. ("*" to cancel.)


	Wiegand 4 bits	Wiegand 6 bits	Wiegand 8 bits	ASCII Hex Code	Buffering (Decimal)	Buffering (BCD)
1	0001	000010	11100001	31 00 00	0~65535	00000000~ 99999999
2	0010	000100	11010010	32 00 00		
3	0011	000111	11000011	33 00 00		
4	0100	101001	10110100	34 00 00		
5	0101	101010	10100101	35 00 00		
6	0110	101100	10010110	36 00 00		
7	0111	101111	10000111	37 00 00		
8	1000	110001	01111000	38 00 00		
9	1001	110010	01101001	39 00 00		
0	0000	000001	11110000	30 00 00		
*	1010	110100	01011010	2A 00 00	Cancel	Cancel
#	1011	110111	01001011	23 00 00	Send	Send

Remark: Please refer to ANNEX J. for simply output examples.

- **Facility Code**

Facility Code is placed in the first two bytes of output PIN data. Following is an example (without

any package settings, such as header, trailer etc.) that the Facility Code is set to 12 (0x0C).
Once the Facility is set, the output length of PIN data will fixed to 10.

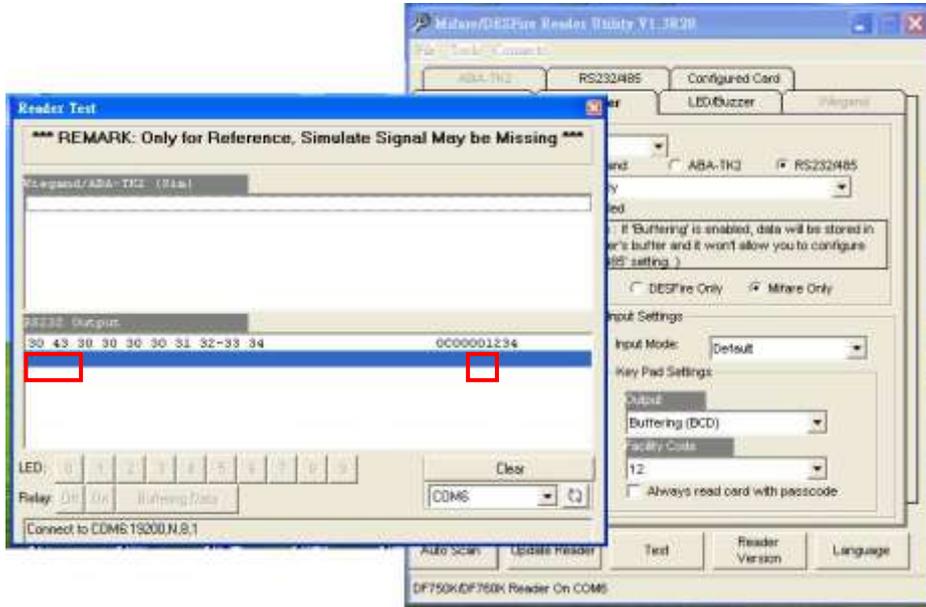


- **Always read card with passcode selection box**

When you select the **Input Mode** to **Default**, you can choose to access the card with passcode registered or not. If you select this setting, then only the card with passcode registered can be read. Once reader read the card and then will require user to enter the PIN number, if match the passcode, the reader will output the card data (or CSN). If you don't select this setting, then present the card without passcode registered, reader will output the card data (or CSN) without requiring user to enter PIN.

Note: The **passcode** can be registered to card by using Card Issuer program with PCR310/320 reader (see the following **PIN Code** field).



➤ LED / Buzzer Settings

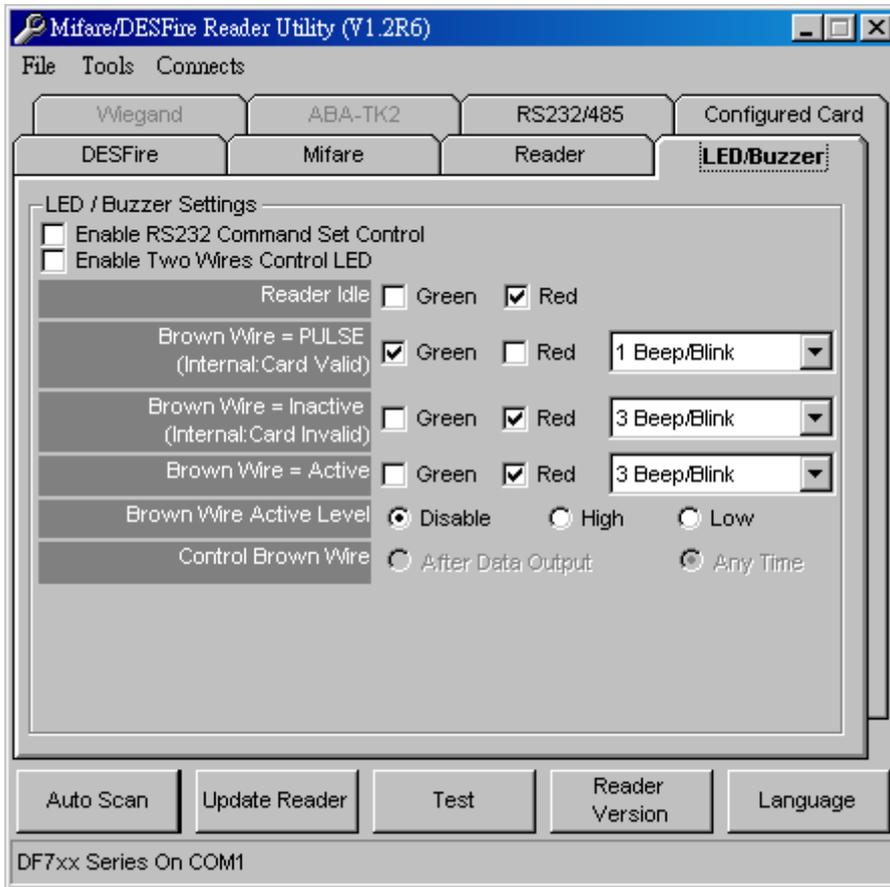


DF7XX supports LED/Alarm configure. Set the LED/Buzzer to indicate the system status for end-user.

Enable RS232 Command Set Control

Enable this setting if you need to control LED/Buzzer by software command set.

Note: This function is only available for the RS232 communication settings are (19200, N, 8, 1).

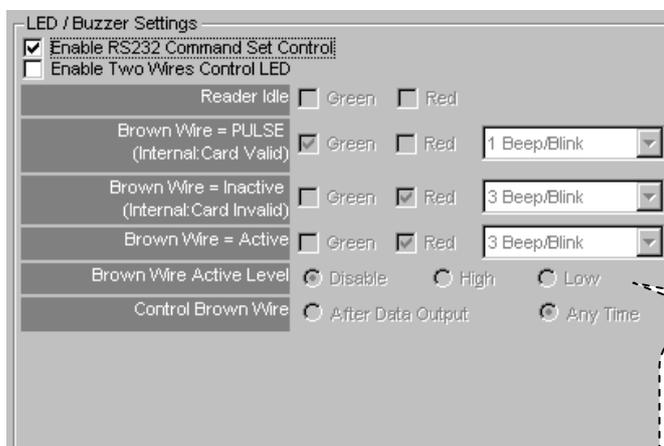

Remark:

If "Enable RS232 Command Set Control (for LED/Buzzer)" is checked, the external LED/Buzzer with high/low level control will be disabled.

RS232 LED/Buzzer command set frame

STX	J	NUMBER (0~9)	CR
02h	4Ah	30h~39h	0Dh

Command Table

NUMBER	Descriptions
0 (30h)	All LED Off, Buzzer Off
1 (31h)	Green LED ON
2 (32h)	Green LED OFF
3 (33h)	Red LED ON
4 (34h)	Red LED OFF
5 (35h)	Buzzer Beep once
6 (36h)	Buzzer Beep 3 Times
7 (37h)	Green LED ON with Beep once
8 (38h)	Red LED ON with Beep 3 Times
9 (39h)	All LED ON (Orange)

Enable Two Wires Control LED (Only for Promag™ reader of baud rate=19200, n, 8, 1)

Set up the "Brown Wire Active Level", and Brown wire and Orange wire will follow the setting.

Example: "Brown Wire Active Level"=High; Green light on when brown wire level was high. The red LED light on when orange wire level high. When both wire change level high at the same time, it will both light on without beep.

LED / Buzzer Settings

Enable RS232 Command Set Control

Enable Two Wires Control LED:

Reader Idle Green Red Blue

Brown Wire = PULSE (Internal: Card Valid) Green Red 1 Beep/Blink

Brown Wire = Inactive (Internal: Card Invalid) Green Red 3 Beep/Blink

Brown Wire = Active Green Red 3 Beep/Blink

Brown Wire Active Level Disable High Low

Control Brown Wire After Data Output Any Time

Remark:

If "Enable Two Wires Control LED" checkbox is checked, the external LED/Buzzer control with high/low level control will be disabled.

Read Idle

Show LED color after power on or idle state.

Brown Wire = PULSE (Internal: Card is Valid)

Show LED color and beeps to indicate the end-user when brown wire inputted pulse signal, or card was passed by reader.

Remark: This setting is enabled when “Brown Wire Active Level” is “Disable”.

Brown Wire = Inactive (Internal: Card is Invalid)

Show LED color and beeps to indicate the end-user when brown wire inputted GND signal, or card was failed by reader.

Brown Wire = Active

Show LED color and beeps to indicate the end-user that brown wire inputted the active level signal from host.

Remark: This setting is enabled when “Brown Wire Active Level” is not “Disable”.

Brown Wire Active Level (default=Disable)

Set brown wire active level condition with host status.

- **Disable** Disable the brown wire. The LED/buzzer is controlled by settings.
- **High** Brown wire active state is in high logic, normal state is in low logic (normal open).
- **Low** Brown wire active state is in low logic, normal state is in high logic (normal closed).

Remark: If setting Active Low, you may have to connect the brown wire to a pull-up resistor (1K~10K) with 5VDC.

Control Brown wire


- **After Data Output** The brown wire will be enabling after finished output the card data or CSN.
- **Any Time** The brown wire enabled in any time.

Note:LED/Buzzer can be controlled by the externally high/low level controller also. (See Annex E.)

Brightness

Change value to brighten or darken LED. More high and more brighten.

➤ **Wiegand Settings**

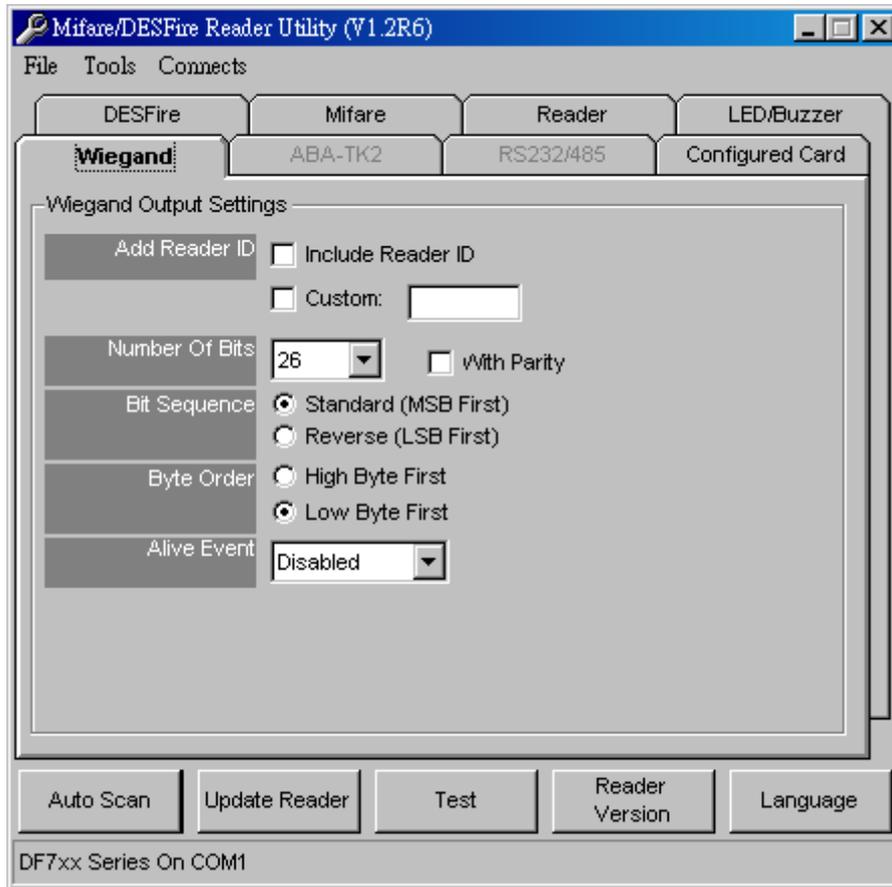

Add Reader ID (default=Disable)

Set Wiegand output data to include the Reader ID when it is checked.

Custom Preamble (default=Disable)

Set the Wiegand output data to include preamble code when it is enabled. This code only combines with CSN output.

Number of Bits (default=26)

Set the Wiegand output type you want to meet your host (or terminal). It can be 1 to 128.

With parity (default=Enable)

Set data with or without parity bit. If this is enabled, it will automatically add parity bit when sending output data.

Bit Sequence (default=Standard)


Set the Wiegand output data sequence, and it can be a standard data sequence (MSB first) or a reverse data sequence (LSB first).

Byte Order (default=High Byte First)

Set the Wiegand output data byte order, and it can be high byte first or low byte first.

Alive Event is reserved.

➤ **ABA-TK2 Settings**

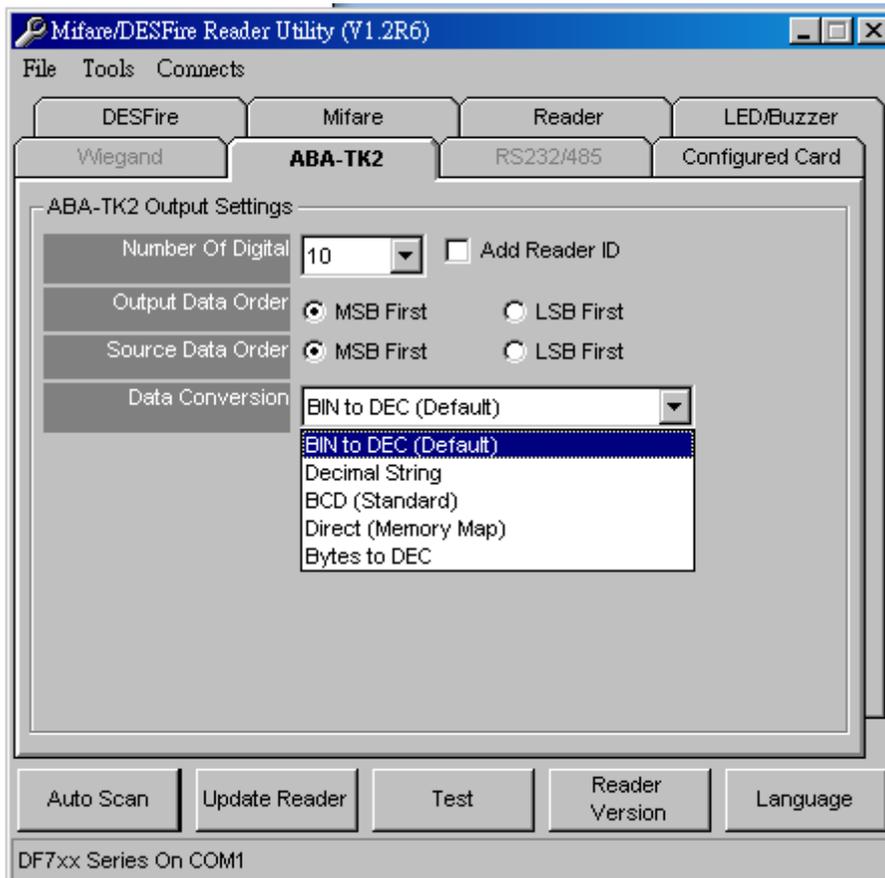

Number of Digital (default=10)

Set the number of digital codes for TK2 output.

Add Reader ID (default=Disable)

Add Reader ID into TK2 data.

Output Data Order (default=MSB First)


Set the TK2 data sequence order.

Data Conversion (default=BIN to DEC)

Select card data format to convert.

- BIN to DEC (the card is issued by Mifare Card Issuer.)
- Decimal String (ex. "123456")
- BCD
- Direct (Memory Map)
- Byte to DEC

➤ RS232/485 Output Settings

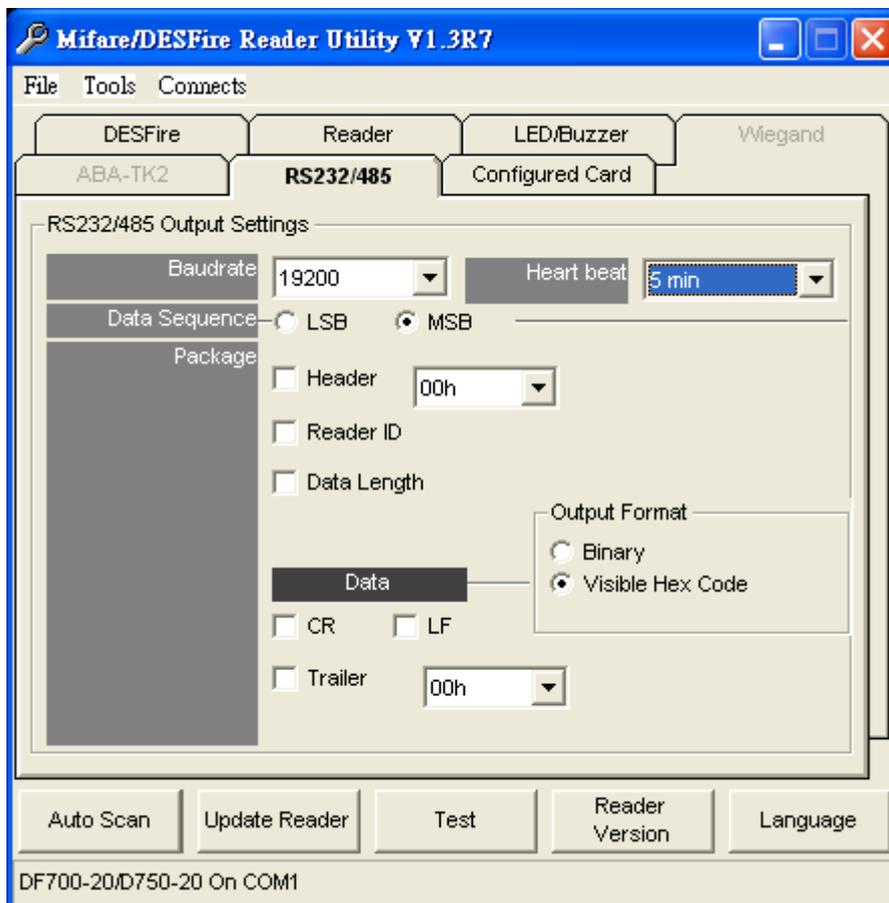

Baud rate (default=9600)

The working range can be set from 2400 to 57600 (depends on the device).

Heart beat (default=disabled)


Click to select the interval time of periodically sending the heart beat data to host via RS232/485 interface. The heart beat data format is: 'E' + 'H' + Device Serial Number.

Example

Header		Device Serial Number							
45h	48h	43h	42h	34h	45h	35h	42h	24h	32h
'E'	'H'	'C'	'B'	'4'	'E'	'5'	'B'	'4'	'2'

If you want an end character in the end of the heart beat data, for example CR, then you can select **CR** box in **Package** group then update to reader.

The interval of sending heart beat data can be:

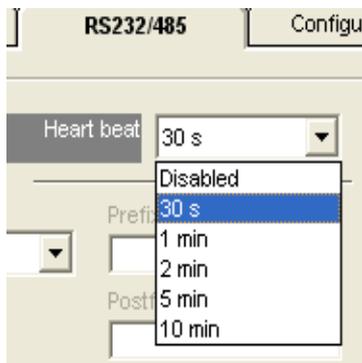

Data Sequence (default=MSB first)

The output data sequence order can be set to "LSB" first or "MSB" first.

Package (default=Header (02h) + CR + LF + Trailer (03h))

To set a packet which includes the "Header", "Reader ID", "Data Length", "CR", "LF" and "Trailer". (Header: 00h~FFh, Trailer: 00h~FFh).

Output Format (default=Hex String)

The output format can be "Binary" or "Hex String".

Note

(1) Wiegand output data packet with Reader ID

Standard	Parity (Even)	Reader ID	(MSB) Data Bits (LSB)	Parity (Odd)
Reverse	Parity (Odd)	Reader ID	(LSB) Data Bits (MSB)	Parity (Even)

(2) RS232/RS485 output data packet with Header, Reader ID and Trailer


Header	Reader ID	(LSB)	Data Bytes	(MSB)	Trailer
--------	-----------	-------	------------	-------	---------

(3) ABA-TK2 with Reader ID

MSB First	SS	Reader ID	(MSB)	Digital Code	(LSB)	ES	LRC
LSB First	SS	Reader ID	(LSB)	Digital Code	(MSB)	ES	LRC

Remark: The reader's all configuration items are write only, so any user cannot read the configuration items from the reader to get the App Key, this is very important to protect your App Key and all configuration items.

> **Configured Card**

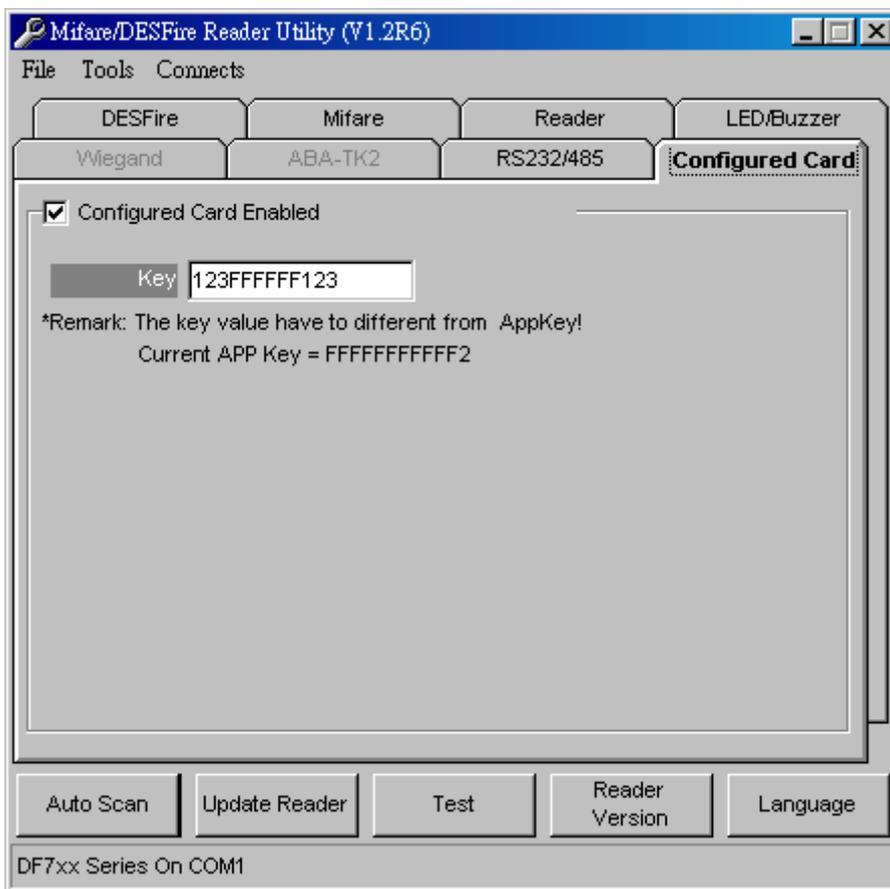

Configured Card Enabled (default=Enable)



Can allow your reader change configuration by Mifare Card.

Key (default=000000000000)


Is the Mifare Key A for allowed the configured card.

3.4 Make a Configured Card


DF7XX supports updating the reader by reading Configured Card. This function is specially using when stand alone system. The following steps guide you how to make a configured card.

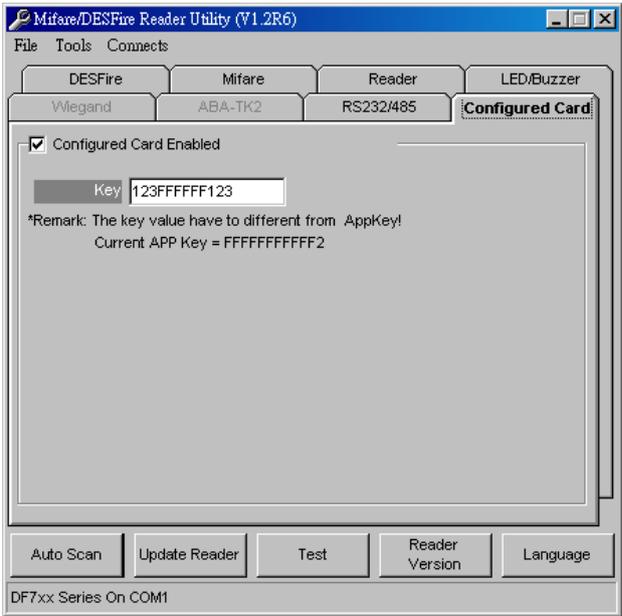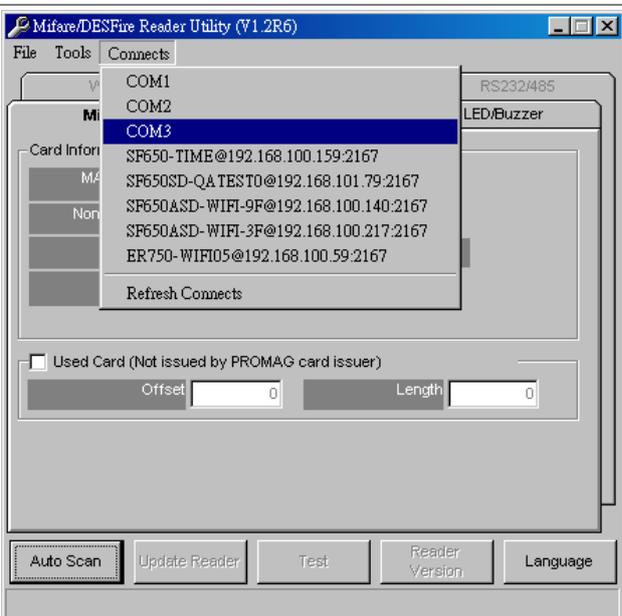
<p>Step 1: Configure the reader.</p> <p>Enable the “Configured Card Enabled” item, and then press [Update Reader].</p>	
<p>Step 2: Connect the PCR310 to PC for issuing card.</p> <p style="text-align: center;">↓</p> <p>Select the series corresponding, or load the configuration file.</p> <p style="text-align: center;">↓</p> <p>Select the reader’s model name.</p> <p style="text-align: center;">↓</p> <p>Click "OK".</p>	

Remark: The corresponding series are “DF700/DF750 Series” and “DF750K Series”.

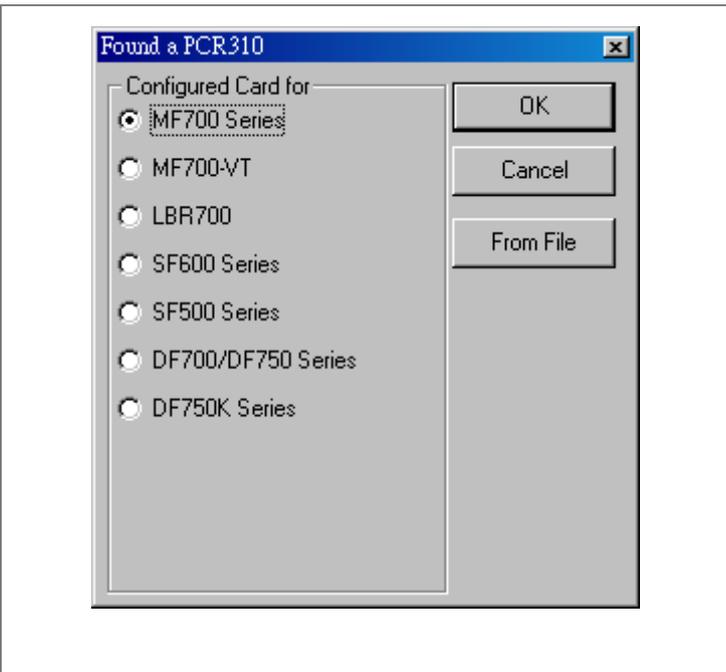

Step 3:
Configure all settings as normal.
↓
Click [Configure Card].

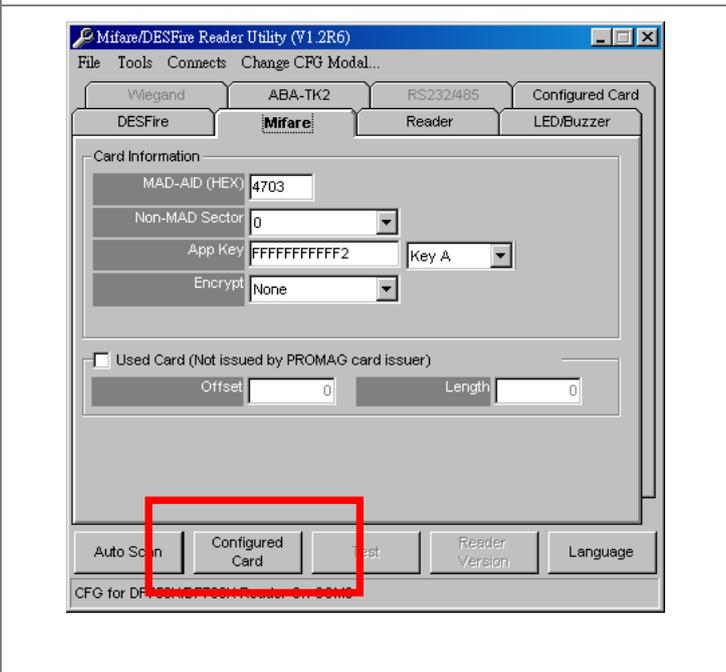
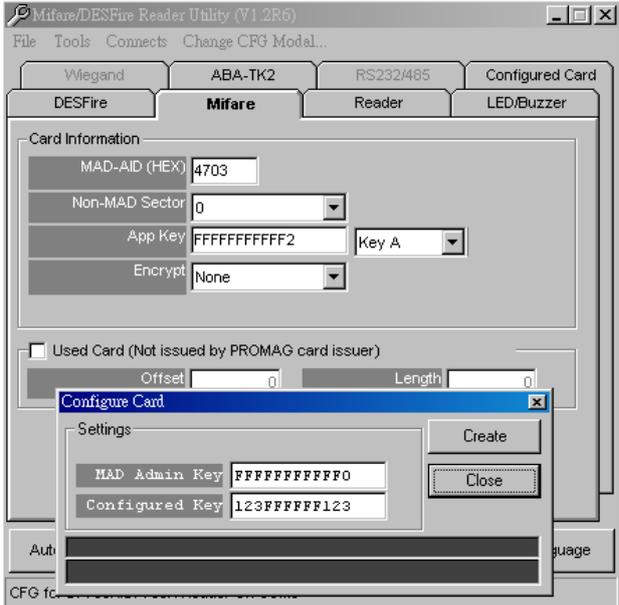
<p>Step 4: Put a Mifare card in the PCR310 cassette.</p> <p style="text-align: center;">↓</p> <p>Enter “MAD Admin Key” and “Configured Key” (which has been updated to the corresponding reader).</p> <p style="text-align: center;">↓</p> <p>Click [Create].</p>	
<p>Step 5: Take this card to approach the reader for configured settings.</p>	<p>Remark: If the reader you use is the one with the keypad, you need to press *00# to enter the configuration mode (within 10-seconds beeps) and press * to exit the configuration mode. In short, to make the configured card work, please press *00# on the reader (the reader will start to sound the beeps) and then present the configured card to the reader.</p>

4. Data Output

4.1 Reader Test

After reader's configurations have been updated success, you can use [Test] function to check reader's configurations have been correctly stored.

The screenshot shows the 'Reader Test' window. At the top, a message reads: '*** REMARK: Only for Reference, Simulate Signal May be Missing ***'. Below this, the 'Wiegand/ABA-TK2 (Sim)' section has a 'Decode with Parity' checkbox. The main display area shows 'Wiegand 26 : Without Pty : 0101-0100-0101-1101-0011-0000-11-' and 'Preamble(0) - 54 5D 30 3'. The 'RS232 Output' section is currently empty. At the bottom, there are controls for 'LED' (0-9), 'Relay' (Off/On), 'Buffering Data', a 'COM' port dropdown menu (set to COM2), and a 'Clear' button. Red callout boxes provide the following instructions:

- 'Use to "decode with parity" when Wiegand interface not with parity.' (pointing to the 'Decode with Parity' checkbox)
- 'Click to clear the output data, or double click the output area.' (pointing to the 'Clear' button)
- 'Available COM ports.' (pointing to the 'COM2' dropdown menu)
- 'Click to re-connect COM port.' (pointing to the refresh icon next to the 'COM2' dropdown)

LED [0]~[9] (default=Disable)

Manually to control LED/buzzer by commands [0]~[9]. Enable this by "Enable RS232 Command Set Control".

Buffering (default=Disable)

Manually to control data output timing by the command [Buffering Data].

Enable this by "Buffering" Enabled.

Relay (default=Disable)


Not available for DF7XX.

4.2 Test Read Card After Updating

The following steps guide you how to test read card.

1. After set configurations in the Reader Utility software, you can click [Update Reader] to update the currently configurations to the reader.
2. Or, click [Test] to update configurations and verify output data.
3. Take an issued Mifare card and approach it to the reader, You can see the output data on “Reader Test” window.

Example: Wiegand 34 bits output data with Standard bit sequence

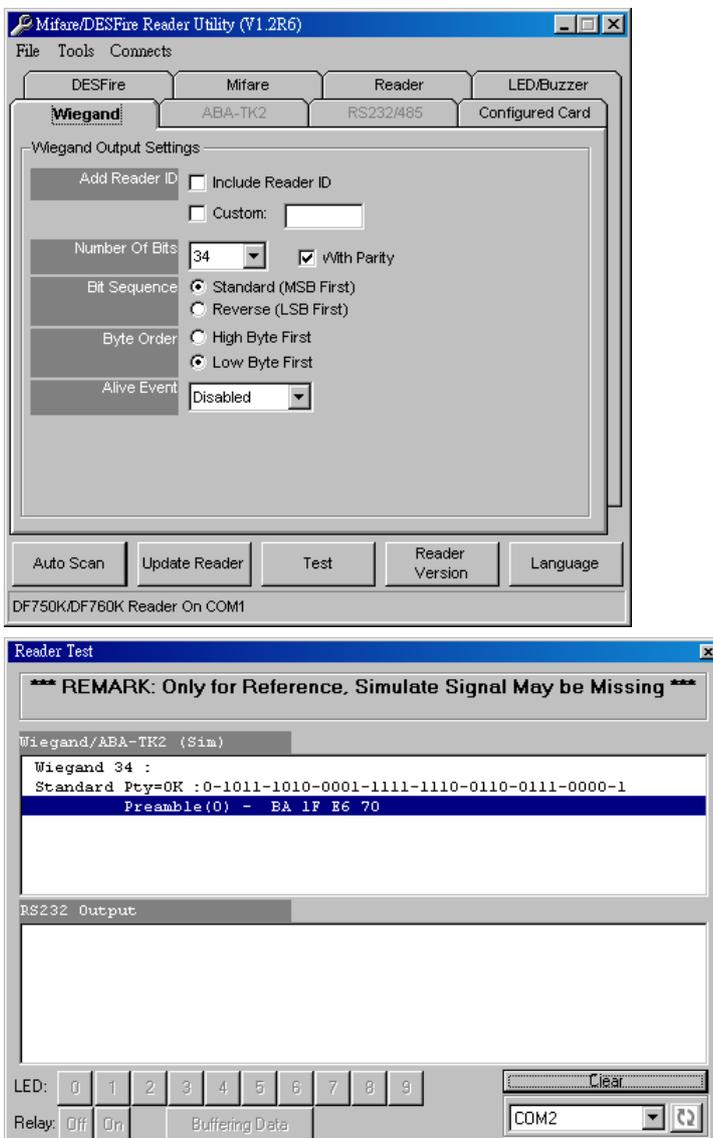


Remark: (1) When using reader-kit to test Wiegand (or TK2) signal, this test may be failed if the processor of computer is too slow. (2) When using reader-kit to test Wiegand (or TK2) signal, you need to connect to the physical COM port.


4.3 Test Key Pad After Updating

4.3.1 Simply Output "1234" – RS232 Interface

RS232 interface – Settings

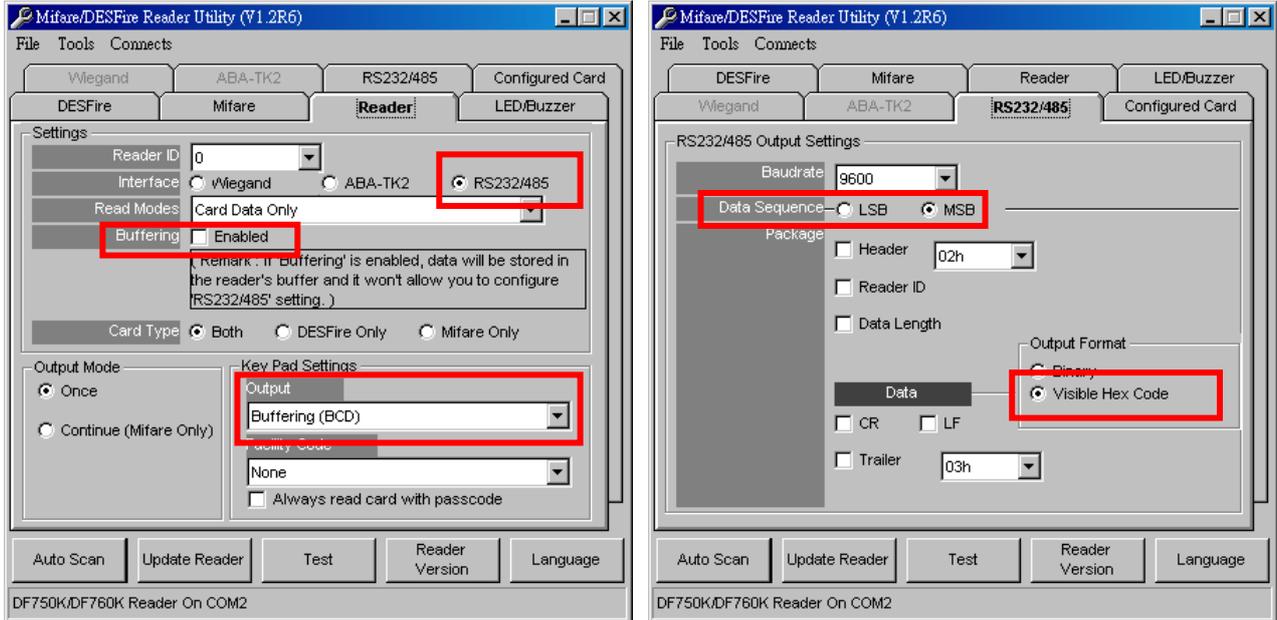


RS232 interface – Output: Press "1234" + "#"

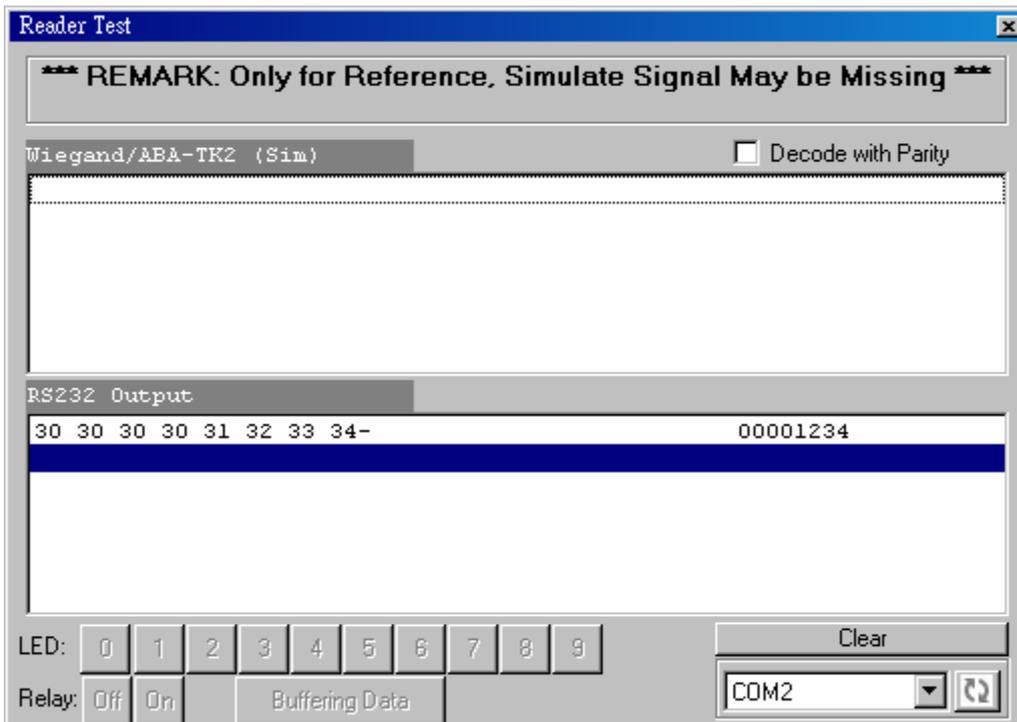


Result=1234

4.3.2 Simply Output “1234” – ABA-TK2 Interface

ABA-TK2 interface – Settings

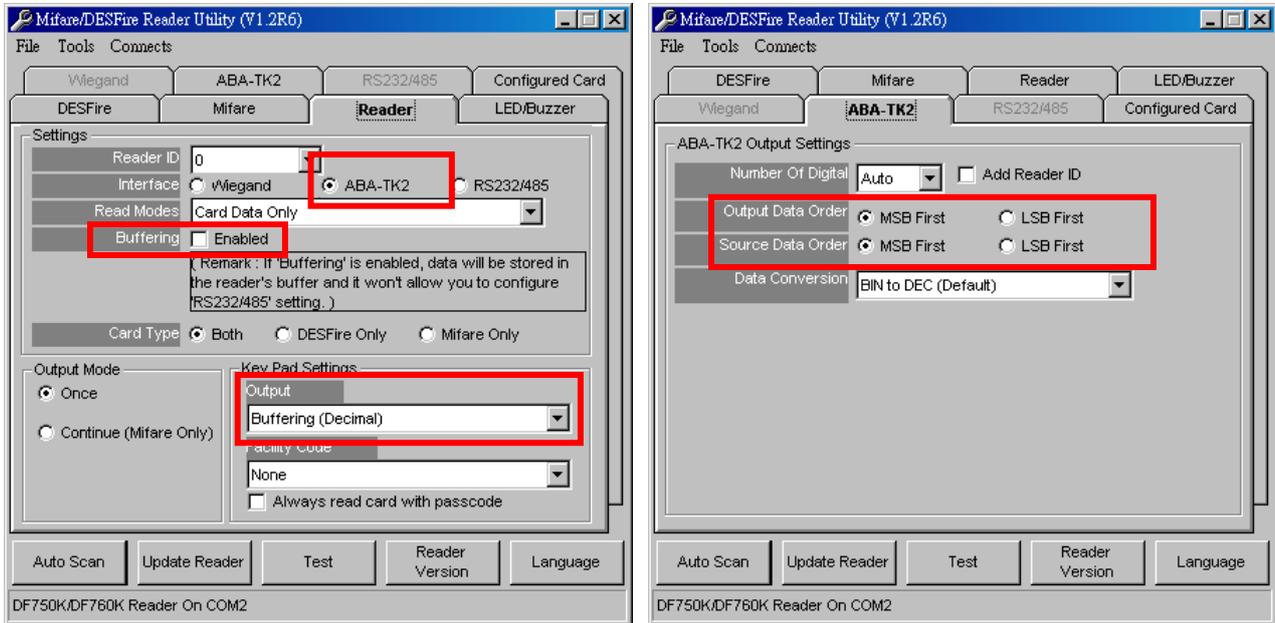


ABA-TK2 interface – Output: Press “1234” + “#”

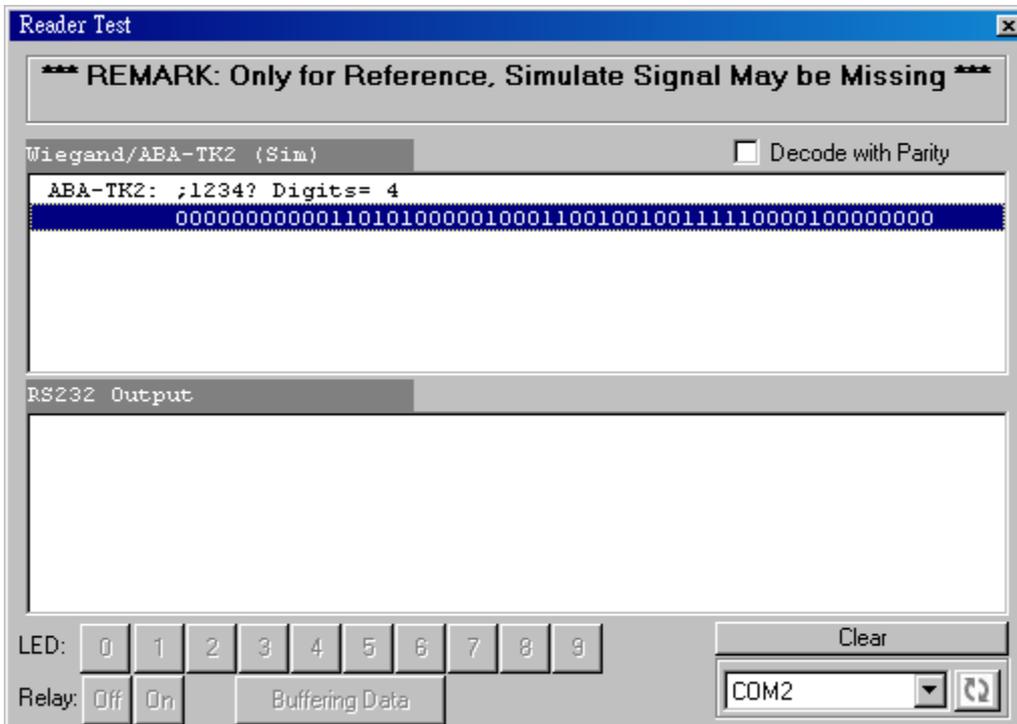


Result=1234

4.3.2 Simply Output “1234” –Wiegand Interface

Wiegand interface – Settings

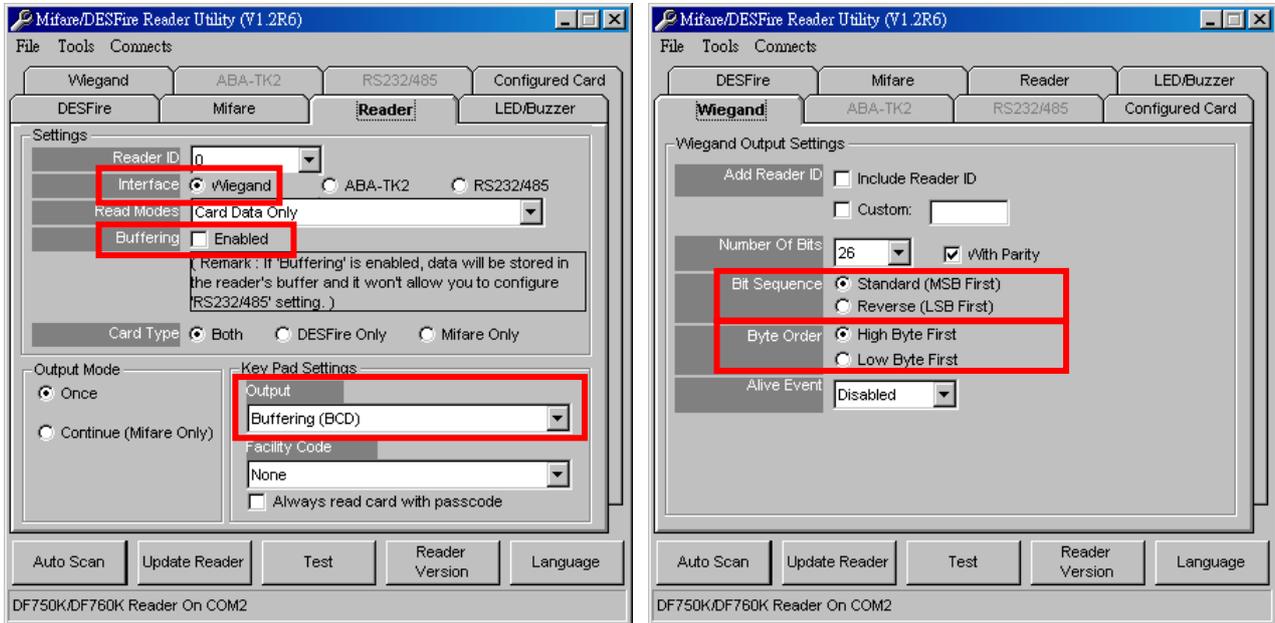

Wiegand interface – Output: Press “1234” + “#”

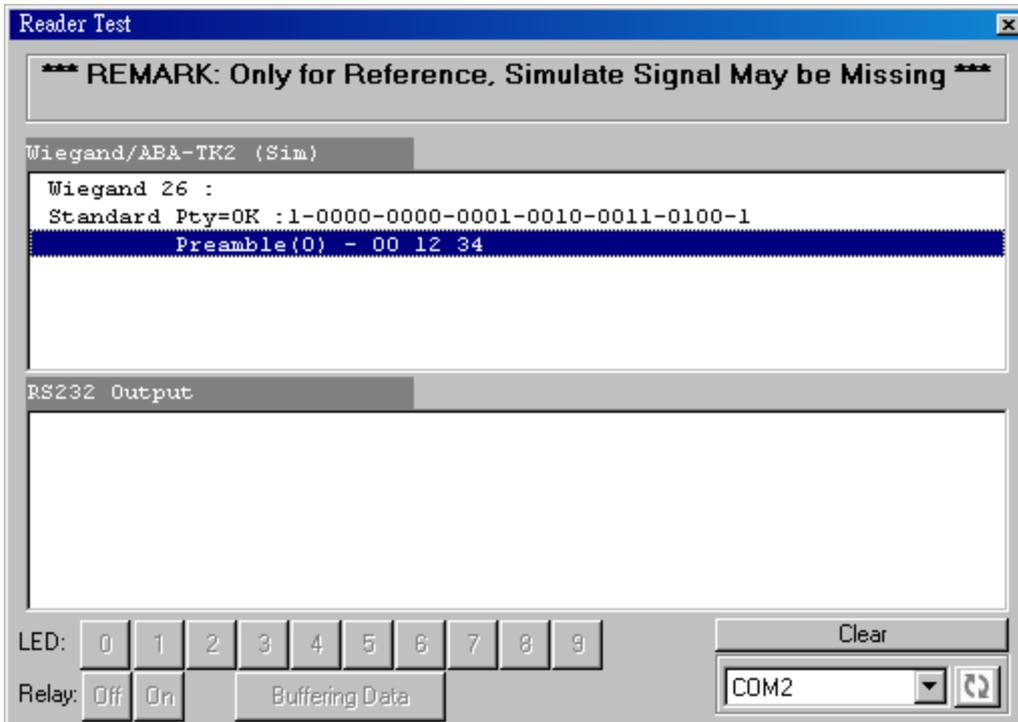


Result=1234

Appendix

ANNEX A. Wiegand Interface

The Data 1 and Data 0 signals are held at a logic high level until the reader is ready to send a data stream. The reader places data as asynchronous low-going pulses on the Data 1 or Data 0 lines to transmit the data stream to Host. The Data 1 and Data 0 pulses will allow allowable pulse width times and pulse interval times for the reader.

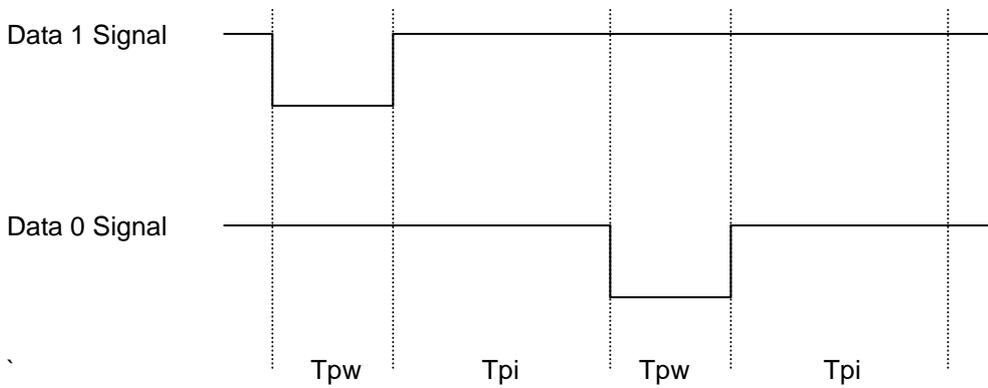


Pulse Times

Symbol	Description	Typical Time
Tpw	Pulse Width Time	100us +/- 3%
Tpi	Pulse Interval Time	1.9ms +/- 3%

Wiegand Packet (Without Reader ID)


Standard (Default)	Parity(Even)	(MSB)	Data Bits	(LSB)	Parity(Odd)
Reverse (Option)	Parity(Odd)	(LSB)	Data Bits	(MSB)	Parity(Even)

Example of connecting Wiegand wires (the pull high resistor must $\geq 10K$ Ohm)

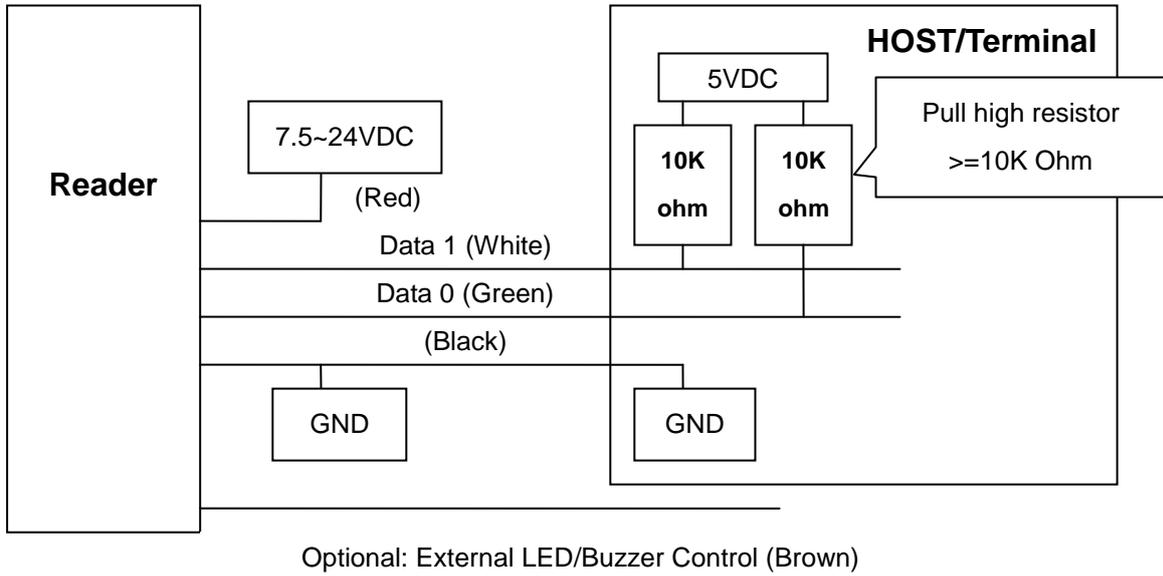

ANNEX B. ABA-TK2 Interface

Example of the timing for card present, clock (strobe) and data

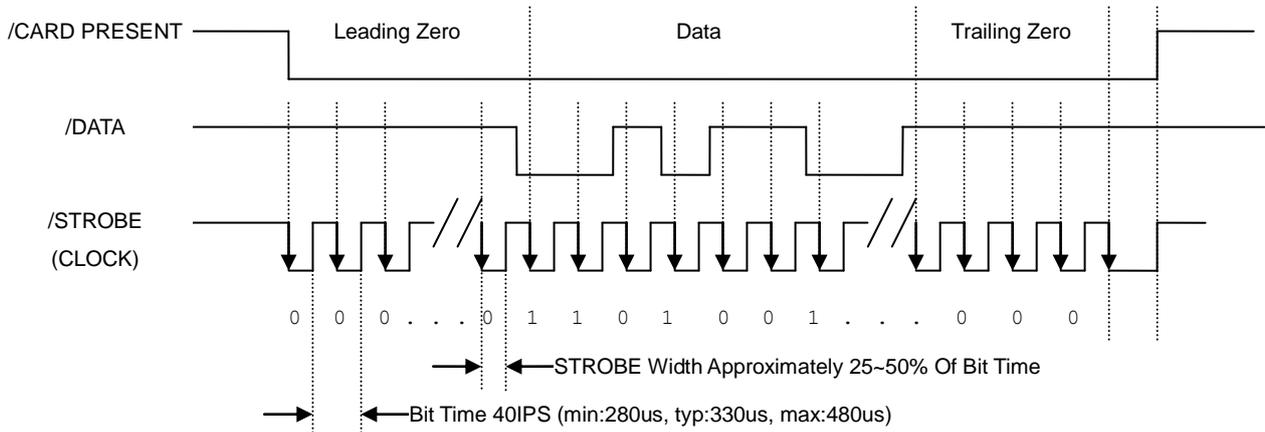

DATA

The data signal is valid while the clock is low. If the Data signal is high, the bit is a zero. If the Data signal is low, the bit is a one.


CLOCK (STROBE)

The Clock signal indicates when Data is valid. It is recommended that Data be loaded by the user with the leading edge (negative) of the Strobe.

CARD PRESENT


Card Present will go low after flux reversals from the Reader. Card Present will return high after the last flux reversal.

Example of connecting ABA TK2 wires

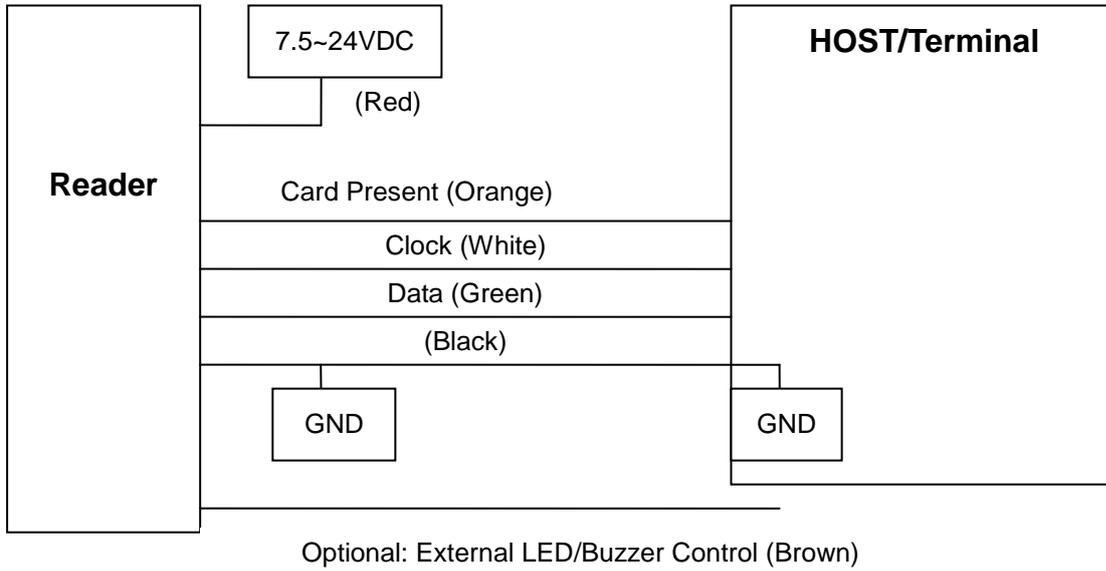

ANNEX C. RS232 Interface

Example of connecting RS232 wires

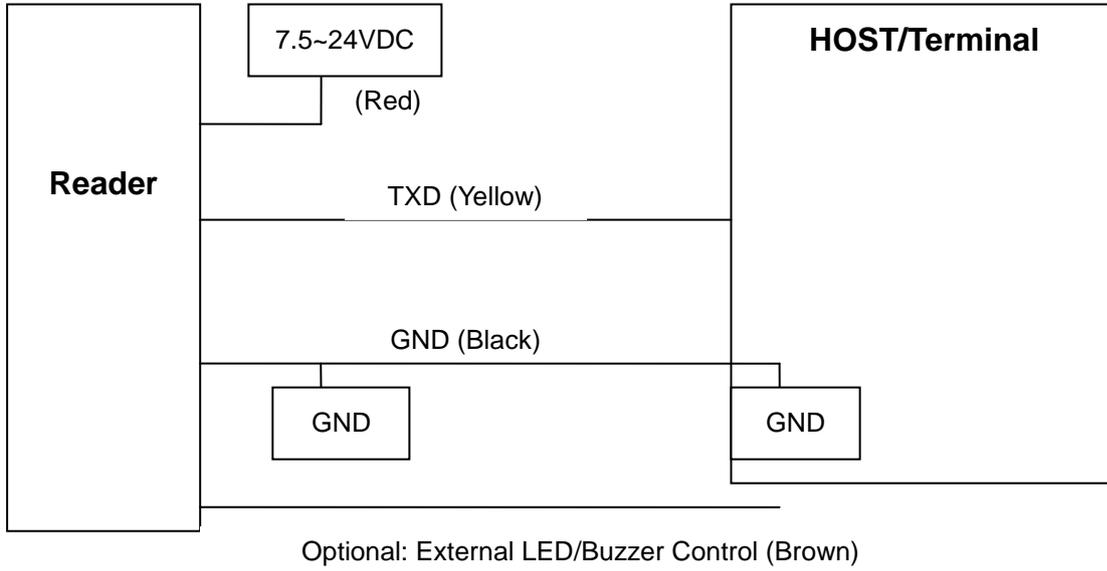


ANNEX D. External LED/Buzzer Control


DF7XX supports the external LED/Buzzer control for Terminal (or Host) to prompt end-user the card data is invalid or valid. Use Brown wire to control the LED/Buzzer of DF7XX.

Examples (Active High)

(1) Show External Invalid Status

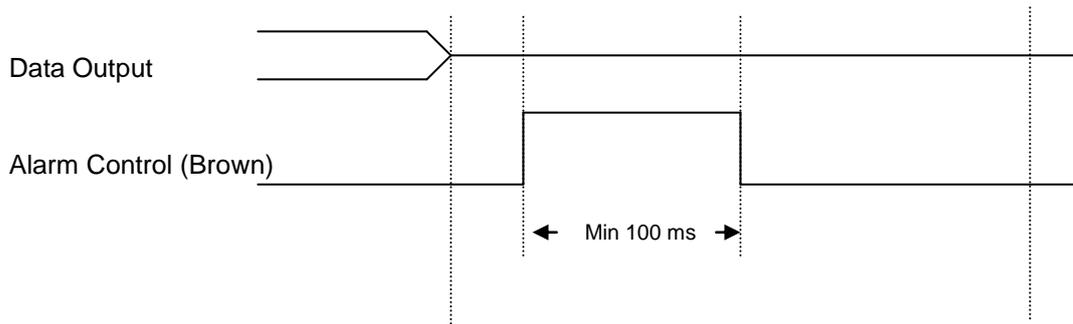

(2) Show Card Valid Status

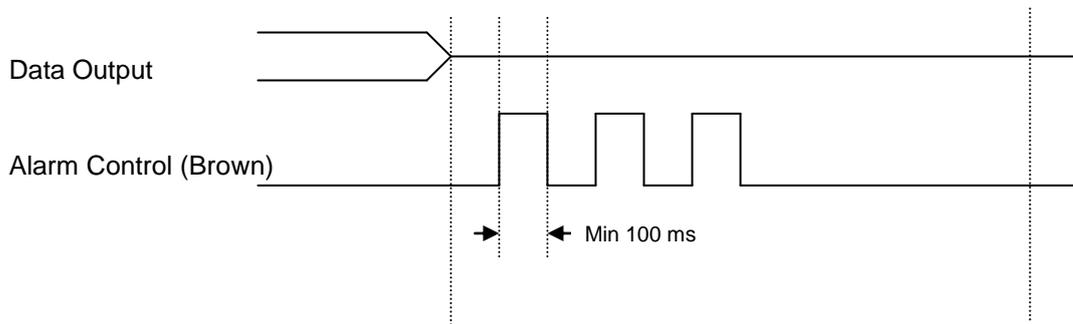

Note

1. Send one pulse to show the “Extern Invalid” LED/buzzer status.
2. Send three or more pulse to show the “Card Valid” LED/buzzer status.
3. You can configure the LED/buzzer status by reader utility software.

ANNEX E. History

- Rev G: June 24, 2017
Added note for [Enable RS232 Command Set Control].
- Rev G: May 26, 2017
Added Heart beat data format
- Rev F: January 18, 2017
Added input mode selection for DF750K reader
- Rev E: May 26, 2016
Added Heart beat setting
- Rev C: November 30, 2011 (Kylie)
Update Mifare Reader Utility Pics.
Modify Reader ID to 0~63.
Add "Source Data Order". (P.14)
Modify "Sequence Order" to "Output Data Order".(P.14)
Modify "Remark". (P.11)
January 12, 2012 (Kylie)
Modify "DataLength" limit to 64 bytes. (p.8)
Add how to "Read the Configure Card". (p.29)
August 15, 2012 (Kylie)
Add examples for keypad output. (p.31~33)
September 13, 2013 (Kylie)
Delete e. (P. 29)
Modify remark. (P.28)
September 16, 2013 (Kylie)
Update utility S/W & Web ISP S/W pictures.
November 20, 2013 (Kylie)
Add "Hardware Compare table" and "Software requirement table" (p.9)(p.11)
September 12, 2014 (Kylie)
Add a note about DF710/DF760 wire assignment by using USB485A. (p. 12)
September 26, 2014 (Kylie)
Fix "Two Wire Control" descriptions. (p. 22)
- Rev D: August 12, 2015 (Kylie)
Add notice for Access key, the utility DESfire configure. (P. 17)
- Rev B: October 29, 2009
Fix power supply 7.5V~24VDC
- Rev A: February 12, 2009
Issue DF7XX

PROMAG[®]

GIGA-TMS INC.

<http://www.gigatms.com.tw>

<mailto:promag@gigatms.com.tw>

TEL : +886-2-26954214

FAX : +886-2-26954213

Office: 8F, No. 31, Lane 169, Kang-Ning St., Hsi-Chih, Taipei, Taiwan